

Build the right leg of Philo Junior

Step 10



Step 11




Step 12



Carefully Slide the top and then the bottom of SV4043-D into RB002.




Do not press too hard.

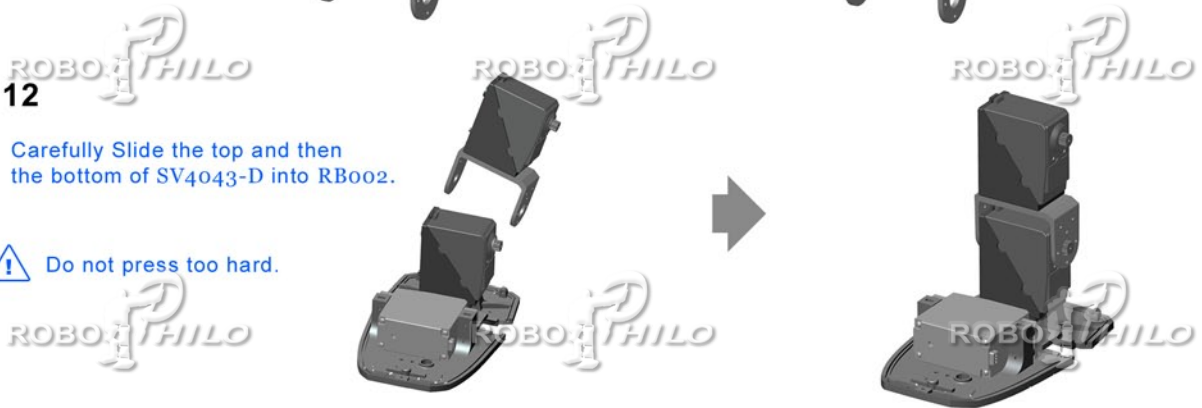

Step 13



Do not tighten this screw too much.

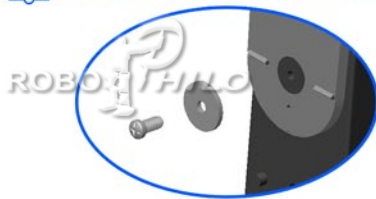

RB004

PA2x5



Step 14



Similarly, carefully slide the top and then the bottom of SV4043-D into RB002.



Do not press too hard.

